



Original	Replacement	Original	Replacement
	Power		Power
	Open/Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Cancel		Shift + Exit / Cancel / Clear
	Audio		Audio / Lang I/II
	Receiver Vol+		Vol+
	Receiver Vol-		Vol-
	Receiver Mute		Mute / Dimmer
	Vieta Cast		Smart / List
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	<< Slow/Search		<< / Tune-
	Slow/Search >>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Status		Text / Goto
	Exit		Exit / Cancel / Clear
	Option		Shift + Setup / OPT / Tools
	Return		Back / Return
	Top Menu/Direct Navigator		D.Menu / Top
	Pop-Up Menu		Shift + Menu / Home
	Function Menu		Menu / Home
	Up		Up
	Down		Down





Original	Replacement
	 Right
	 Left
	 OK
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Setup / OPT /
	 Picture / Format
	 Display / Media
	 AV / Input / RDS
	 Shift + Power
	 Shift + AV / Input / RDS
	 Shift + Vol+
	 Shift + Vol-
	 CH+ / Page+
	 CH- / Page-

Original	Replacement

