



Original	Replacement	Original	Replacement
Power	Power	Open/Close	Eject / Surround
Power Tv	Shift + Power	Status	TV/Radio /
AV Input Tv	AV / Input / RDS	PIP	Zoom / Size
Vol+ Tv	Vol+	Internet	Smart / List
Vol- Tv	Vol-	<< Search	<< / Tune-
1	1	Play	Play / Slow
2	2	Search >>	>> / Tune+
3	3	I<< Skip	I<< / Preset-
4	4	Pause	Pause / Step / Freeze
5	5	Skip >>I	>>I / Preset+
6	6	Stop	Stop / Hold
7	7	Pop Up Menu	Menu / Home
8	8	EXit	Exit / Cancel / Clear
9	9	Option	Setup / OPT /
0	0	Return	Back / Return
Cancel	Shift + Exit / Cancel / Clear	Top Menu	D.Menu / Top
Audio	Audio / Lang I/II	Netflix	Shift + Red / Netflix / Search





Original	Replacement	Original	Replacement
	Home		Shift + Menu /
	Up		Up
	Down		Down
	Left		Left
	Right/ >		Right
	OK		OK
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original	Replacement

