

 


 






 



 






 


















 

 














Original	Replacement	Original	Replacement
 Power	 Power	 Right	 Right
 Guide	 Guide / EPG / -/--	 Left	 Left
 Input Tv	 TV/Radio /	 OK	 OK
 Input AV	 AV / Input / RDS	 Red	 Red / Netflix / Search
 Menu	 Menu / Home	 Green	 Green / APP / Repeat
 Text	 Text / Goto	 Yellow	 Yellow / YouTube / Repeat
 STTL/AD	 Subtitle / EQ	 Blue	 Blue / Prime Video / Random
 Aspect	 Picture / Format	 Vol+	 Vol+
 Info	 Info / Angle	 Vol-	 Vol-
 Exit	 Exit / Cancel / Clear	 Mute	 Mute / Dimmer
 Netflix	 Shift + Red / Netflix /	 CH+	 CH+ / Page+
 Home	 Shift + Menu /	 CH-	 CH- / Page-
 APPS	 Shift + Green / APP /	 1	 1
 Option	 Setup / OPT /	 2	 2
 Return	 Back / Return	 3	 3
 Up	 Up	 4	 4
 Down	 Down	 5	 5

Original	Replacement	Original	Replacement
 Power	 Power	 Right	 Right
 Guide	 Guide / EPG / -/--	 Left	 Left
 Input Tv	 TV/Radio /	 OK	 OK
 Input AV	 AV / Input / RDS	 Red	 Red / Netflix / Search
 Menu	 Menu / Home	 Green	 Green / APP / Repeat
 Text	 Text / Goto	 Yellow	 Yellow / YouTube / Repeat
 STTL/AD	 Subtitle / EQ	 Blue	 Blue / Prime Video / Random
 Aspect	 Picture / Format	 Vol+	 Vol+
 Info	 Info / Angle	 Vol-	 Vol-
Exit	Exit / Cancel / Clear	Mute	Mute / Dimmer
Netflix	Shift + Red / Netflix /	CH+	CH+ / Page+
Home	Shift + Menu /	CH-	CH- / Page-
APPS	Shift + Green / APP /	1	1
Option	Setup / OPT /	2	2
Return	Back / Return	3	3
Up	Up	4	4
Down	Down	5	5





	Original	Replacement	Original	Replacement
	6			
	7			
	8			
	9			
	0			
	Last View			
	Hexa Boost			
	<< / I <<<			
	Play			
	>> / >> I			
	Stop			
	Pause			
	Rec			
	Off Timer			
	My APP			
	e-Help			

