




















Original	Replacement	Original	Replacement
	Power		8
	Power Tv		9
	Vol+ Tv		Last View
	CH+ Tv		0
	Drive Select		Radio/Tv
	Input AV Tv		I<< Skip
	Vol- Tv		Skip >>I
	CH- Tv		<< Slow/Search
	1		Slow/Search >>
	2		Stop
	3		Pause/PAUSE LIVE
	Page/CH+		Play
	4		i/Status
	5		X/Exit
	6		Guide
	Page/CH-		Video Menu
	7		Left
	Power		8
	Shift + Power		9
	Vol+		Fav / Marker / PC
	Shift + CH+ /		0
	Picture / Format		TV/Radio /
	Shift + AV / Input / RDS		I<< / Preset-
	Vol-		>>I / Preset+
	Shift + CH- /		<< / Tune-
	1		>> / Tune+
	2		Stop / Hold
	3		Pause / Step / Freeze
	CH+ / Page+		Play / Slow
	4		Info / Angle
	5		Exit / Cancel / Clear
	6		Guide / EPG / -/-
	CH- / Page-		D.Menu / Top
	7		Left



