



Original	Replacement
Power	Power
DVD	Shift + 2
FM/AM	Shift + 6
Display	Display / Media
Open/Close	Eject / Surround
Input Select	AV / Input / RDS
1	1
2	2
3	3
CH+	CH+ / Page+
4	4
5	5
6	6
CH-	CH- / Page-
7	7
8	8
9	9

Original	Replacement
Volume+	Vol+
Cancel	Exit / Cancel / Clear
0	0
-/--	Guide / EPG / -/--
Volume-	Vol-
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
<< Slow/Search	<< / Tune-
Slow/Search >>	>> / Tune+
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play / x1.3	Play / Slow
Top Menu / Direct Navigator	D.Menu / Top
Up	Up
Menu / Play List	Menu / Home
Left	Left
Enter	OK







Original	Replacement
	Right
	Smart / List
	Down
	Back / Return
	Yellow / YouTube / Repeat
	Shift + 1
	Shift + Left
	Shift + Right
	Green / APP / Repeat
	Shift + Text /
	Sound / Title
	Sleep / Timer
	TV/Radio /
	Shift + Exit / Cancel / Clear
	Rec / Rec Mode
	Info / Angle
	Text / Goto

Original	Replacement
	Fav / Marker / PC
	Zoom / Size
	Shift + Rec / Rec Mode
	Red / Netflix / Search
	Subtitle / EQ
	Picture / Format
	Audio / Lang I/II
	Mute / Dimmer
	Setup / OPT /





Original	Replacement
 Power	 Power
 Power AV	 Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ≥10 / -/--	 Guide / EPG / -/--
 Tv/AV	 AV / Input / RDS
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Tv Vol+	 Vol+

Original	Replacement
 Tv Vol-	 Vol-

