 

 
 
 

 
 
 
 


 





 



 

 









 


 

 














 

 

 

Original	Replacement
	 Power
	 Shift + 3
	 Shift + 1
	 TV/Radio /
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Display / Media
	 0
	 AV / Input / RDS
	 Vol+

Original	Replacement
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 Info / Angle
	 Setup / OPT /
	 Smart / List
	 Guide / EPG / -/-
	 Menu / Home
	 Up
	 Left
	 OK
	 Right
	 Back / Return
	 Down
	 Exit / Cancel / Clear
	 Shift + Down





Original	Replacement
 Zoom+	 Shift + Up
 @/Home	 D.Menu / Top
 Sleep	 Sleep / Timer
 Pre-CH	 Shift + Back / Return
 FAV	 Fav / Marker / PC
 List	 Shift + Smart / List
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 OO/Lang	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Text	 Text / Goto
 I<	 I<< / Preset-
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Replacement
 >	 >> / Preset+
 <<	 << / Tune-
 Rec	 Rec / Rec Mode
 >>	 >> / Tune+

