
 
 

 



 
 


 
 
 

 

 

 





 


 










| Original | Replacement |
|---|--|
|  Power |  Power |
|  Source |  AV |
|  Top Menu |  Menu |
|  Disc Menu |  D. Menu |
|  Smart TV |  TV/R |
|  Bluetooth |  Guide |
|  Home |  Smart |
|  [=] |  Text |
|  OK |  Ok |
|  Up |  Up |
|  Down |  Down |
|  Left |  Left |
|  Right |  Right |
|  Red |  Red |
|  Green |  Green |
|  Yellow |  Yellow |
|  Blue |  Blue |

| Original | Replacement |
|--|---|
|  Open/Close |  Eject |
|  Return |  Back |
|  III |  Options |
|  Play |  Play |
|  Stop |  Stop |
|  Pause |  Pause |
|  << |  << |
|  >> |  >> |
|  < |  << |
|  > |  >> |
|  + |  Vol + |
|  - |  Vol - |
|  Mute |  Mute |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |



