




 




 




 



 


 

 

 

 
 




 








 








Original	Replacement	Original	Replacement
 Power	 Power	 Left	 Left
 1	 1	 OK	 Ok
 2	 2	 P+	 Ch +
 3	 3	 P-	 Ch -
 4	 4	 Vol+	 Vol +
 5	 5	 Vol-	 Vol -
 6	 6	 [...]	 Subt
 7	 7	 :>	 Format
 8	 8	 T-C	 TV/R
 9	 9	 Audio	 Dual
 0	 0	 Zoom	 Eject
 DVD Menu	 D. Menu	 Repeat	 Text
 OSD Menu	 Menu	 A-B Repeat	 Options
 Return	 Back	 Shuffle	 AV
 Up	 Up	 Play	 Play
 Down	 Down	 Stop	 Stop
 Right	 Right	 Pause	 Pause





Original	Replacement	Original	Replacement
	>>		>>
	<<		<<
	>		>
	<		<<

