

 


 



 


 

 















Original	Replacement
	 Power
	 AV / Input / RDS
	 Smart / List
	 Menu / Home
	 Shift + 9
	 D.Menu / Top
	 Up
	 Shift + D.Menu / Top Menu
	 Left
	 OK
	 Right
	 Down
	 Back / Return
	 Display / Media
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat

Original	Replacement
	 Blue / Prime Video / Random
	 Eject / Surround
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 I<< / Preset-
	 << / Tune-
	 >> / Tune+
	 >>I / Preset+
	 Vol+
	 Mute / Dimmer
	 Shift + 3
	 Vol-
	 1
	 2
	 3
	 4





Original	Replacement	Original	Replacement
5	5		
6	6		
7	7		
8	8		
9	9		
Subtitle	Subtitle / EQ		
0	0		
Audio	Audio / Lang I/II		

