















 























 











 



 



 


 



 













 











	Original	Replacement		Original	Replacement
	Power		Power		Timer
	Open/Close		Eject		Sleep
	USB		Blue		DBB
	CD		Yellow		DSC
	Tuner		Green		RDS/News
	AUX		Red		Mute
	Vol-		Vol -		Repeat
	Vol+		Vol +		Shuffle
	I<<		I<<		
	>>I		>>I		
	Album/Preset		Ch -		
	Album/Preset		Ch +		
	Stop		Stop		
	Play / Pause		Play		
	Play / Pause		Pause		
	Program		Shift + Sleep		
	Clock/Display		Info		





 

 



 





 





 

 







 

 






Original		Replacement		Original		Replacement	
	Power		Power		Timer		AV
	Open/Close		Eject		Sleep		Sleep
	USB		Blue		DBB		Dual
	CD		Yellow		DSC		Subt
	Tuner		Green		RDS/News		TV/R
	AUX		Red		Mute		Mute
	Vol-		Vol -		Repeat		Text
	Vol+		Vol +		Shuffle		Format
	I<<		I<<				
	>>I		>>I				
	Album/Preset		Ch -				
	Album/Preset		Ch +				
	Stop		Stop				
	Play / Pause		Play				
	Play / Pause		Pause				
	Program		Shift + Sleep				
	Clock/Display		Info				





Original	Replacement	Original	Replacement
 Power	 Power	 DBB	 Dual
 Open/Close	 Eject	 DSC	 Subt
 USB	 Blue	 RDS/News	 TV/R
 CD	 Yellow	 Mute	 Mute
 Tuner	 Green		
 AUX	 Red		
 Vol-	 Vol -		
 Vol+	 Vol +		
 I<<	 I<<		
 >>I	 >>I		
 Album/Preset	 Ch -		
 Album/Preset	 Ch +		
 Stop	 Stop		
 Program	 Shift + Sleep		
 Clock/Display	 Info		
 Timer	 AV		
 Sleep	 Sleep		





	Original	Replacement	Original	Replacement
	USB	D		
	CD	C		
	Tuner	B		
	AUX	A		
	Open/Close	ZOOM		
	Power			
	Vol+	+ VOL		
	Vol-	- VOL		
	Clock/Display	DISPLAY INFO		
	Timer	TIMER AV		
	Sleep	PROG SLEEP		
	DBB	SOUND DUAL		
	DSC	AD SUBT		
	RDS/News	SEARCH TV/R		
	Mute	MUTE		

