
 
 

 
 
 
 

 

 



 

 
 
 
 

 




| Original | Replacement |
|--|---|
|  Power |  Power |
|  ARC/HDMI |  List |
|  HDMI 1 |  Exit |
|  HDMI 2 |  Menu |
|  Bluetooth |  Ok |
|  Optical |  Up |
|  Aux |  Down |
|  Audio In |  Left |
|  Coax |  Right |
|  USB |  AV |
|  Mute |  Mute |
|  Back |  Back |
|  Sound |  Dual |
|  Surr |  Options |
|  Play/Pause |  Play |
|  I< |  I<< |
|  >I |  >>I |

| Original | Replacement |
|--|--|
|  Auto Vol |  Sleep |
|  Dim |  Subt |
|  Night Mode |  Format |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  Audio Sync + |  Ch + |
|  Audio Sync - |  Ch - |
|  Treble+ |  2 |
|  Treble- |  1 |
|  Bass- |  4 |
|  Bass |  5 |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

