





 





 

 
 
 

 




 


 

 



 





Original	Replacement
 Power	 Power
 Disc / USB	 Shift + 1
 Radio	 Shift + 2
 TV	 Shift + 3
 AUX / DI	 Shift + 4
 MP3 Line-In	 Shift + 5
 Dock	 Shift + 6
 Open / Close	 Clear / Exit
 Program	 Prog / Sleep
 Disc Menu	 E-Manual / D. Menu
 Setup	 Settings / Options
 Setup	 Top Menu / Menu
 Up	 Up
 Left / <<	 Left
 OK	 OK
 Right / >>	 Right
 Down	 Down

Original	Replacement
 Back / Title	 Return / Back
 Display	 Display / Info
 I< Prev	 I<<
 Play / Pause	 Play Mode / Play
 >I Next	 >>I
 Mute	 Mute
 Stop	 Stop
 Vol +	 Vol +
 Vol -	 Vol -
 Surround	 Home / Smart
 TV Vol +	 Ch +
 TV Vol -	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





	Original	Replacement		Original	Replacement
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	Sound	 + 	Shift + Dual		
	Audio Sync		Media		
	Subtitle		Subt		
	Zoom		Eject		
	Repeat		Text		
	Audio		Dual		

