










 

 
 


 







 

 

 








Original	Replacement
	 Power
	 Red
	 Green
	 Yellow
	 Blue
	 D. Menu
	 Menu
	 Smart
	 Ok
	 Up
	 Down
	 Right
	 Left
	 Back
	 Options
	 Play
	 Pause

Original	Replacement
	 Stop
	 Eject
	 >>
	 <<
	 >
	 <<
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Subt





Original		Replacement		Original		Replacement	
AUDIO	Audio	SOUND DUAL	Dual				

