
 
 
 
 
 
 
 





 

 
 
 
 

 
 
 



 
 
 
 
 
 






Original	Replacement	Original	Replacement
	Setup / OPT /		Pause / Step / Freeze
	Power		Play / Slow
	D.Menu / Top		OK
	AV / Input / RDS		TV/Radio /
	Shift + Power		Smart / List
	Exit / Cancel / Clear		Fav / Marker / PC
	Stop / Hold		Info / Angle
	I<< / Preset-		Guide / EPG / -/-
	>>I / Preset+		Subtitle / EQ
	CH+ / Page+		Audio / Lang I/II
	Up		Text / Goto
	CH- / Page-		Mute / Dimmer
	Down		Vol-
	Left		Vol+
	<< / Tune-		1
	>> / Tune+		2
	Right		3





	Original	Replacement	Original	Replacement
	4	VIDEO 4		
	5	TAPE 5		
	6	TUNER 6		
	7	AUX - HDD 7		
	8	USB 8		
	9	BLUETOOTH 9		
	0	HDMI - SAT 0		
	>	RETURN BACK		
	GOTO	SHIFT + GOTO TEXT		
	Red/[<>]	NETFLIX SEARCH		
	Green/Angle	APP REPEAT		
	Yellow/Prog	YouTube REPEAT A-B		
	Blue/Repeat	Prime Video RANDOM		

