 

 

 

 

 

 



 

 

 

 

 

 

 

 

 







Original	Replacement
 Power	 Power
 Open / Close	 Eject / Surround
 AUX / MP3 Link	 Shift + 7
 Radio	 Shift + 6
 Radio	 TV/Radio /
 USB	 Shift + 8
 DOCK	 Shift + 2
 Disc	 Shift + 3
 Info	 Info / Angle
 Up	 Up
 Left/ <<<	 <<< / Tune-
 Left/ <<<	 Left
 OK	 OK
 Right/ >>>	 >>> / Tune+
 Right/ >>>	 Right
 Menu/Back	 Back / Return
 Menu/Back	 Menu / Home

Original	Replacement
 Down	 Down
 Options	 Setup / OPT /
 I<	 I<<< / Preset-
 Play/pause	 Play / Slow
 >I	 >>>I / Preset+
 Mute	 Mute / Dimmer
 Stop	 Stop / Hold
 Vol+	 Vol+
 Surround	 Shift + Eject / Surround
 Sound Modes+	 CH+ / Page+
 Vol-	 Vol-
 Sound Modes-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original	Replacement	Original	Replacement
	6		6
	7		7
	8		8
	9		9
	Subtitle		Subtitle / EQ
	0		0
	Audio/Sync		Audio / Lang I/II
	Repeat/Program		Green / APP / Repeat
	Repeat/Program		Shift + TV/Radio / Program
	Repeat A-B		Yellow / YouTube / Repeat
	Zoom		Zoom / Size
	Sleep		Sleep / Timer

