



















 

 






 
 











 





 



















Original	Replacement
	 Power
	 Stop / Hold
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Picture / Format
	 Shift + Green / APP / REPEAT
	 Menu / Home
	 Guide / EPG / -/--
	 Shift + Smart / List
	 AV / Input / RDS
	 Smart / List
	 Shift + Menu / Home
	 Exit / Cancel / Clear
	 Shift + Red / Netflix / Search

Original	Replacement
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Info / Angle
	 Setup / OPT / OPT-TOOLS
	 Back / Return
	 Display / Media
	 Up
	 Down
	 Left
	 Right
	 OK
	 Vol+
	 Vol-
	 Red / Netflix / Search
	 Mute / Dimmer
	 CH+ / Page+





Original	Replacement	Original	Replacement
 CH-	 CH- / Page-		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Subtitle	 Subtitle / EQ		
 Text	 Text / Goto		

Original	Replacement

