

 


















 
 

 

 



 







Original	Replacement
 Power	 Power
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Source	 AV / Input / RDS
 Home	 Menu / Home
 Format	 Picture / Format
 Back	 Back / Return
 List	 Smart / List
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Adjust	 D.Menu / Top

Original	Replacement
 Down	 Down
 Options	 Setup / OPT /
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





	Original	Replacement		Original	Replacement
	9				
	0				

