 







 








 

 


 

 

 



 








 






 


Original	Replacement
	 Power
	 Stop / Hold
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Fav / Marker / PC
	 Smart / List
	 D.Menu / Top
	 Guide / EPG / -/--
	 Picture / Format
	 Display / Media
	 AV / Input / RDS
	 Zoom / Size
	 Exit / Cancel / Clear
	 Red / Netflix / Search

Original	Replacement
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Info / Angle
	 Up
	 Setup / OPT /
	 Left
	 OK
	 Right
	 Back / Return
	 Down
	 Menu / Home
	 Vol+
	 Shift + Red / Netflix /
	 CH+ / Page+
	 Vol-
	 Mute / Dimmer





Original	Replacement
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Subtitle	 Subtitle / EQ
 0	 0
 Text	 Text / Goto

Original	Replacement

