




Original	Replacement
 Power	 Power
 Tv/Video	 TV/Radio /
 VCR	 Shift + 4
 DVD	 Shift + 2
 Source	 AV / Input / RDS
 Tools	 Shift + Setup / OPT / Tools
 Repeat	 Green / APP / Repeat
 Select	 Display / Media
 Clear	 Exit / Cancel / Clear
 Disc Menu	 D.Menu / Top
 Setup	 Setup / OPT /
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return

Original	Replacement
 Display	 Info / Angle
 <</REW	 << / Tune-
 Play/Pause	 Play / Slow
 >>/FFW	 >> / Tune+
 I</Prev	 I<< / Preset-
 >I/Next	 >>I / Preset+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Tv Vol+	 Vol+
 Dubbing/Direct	 Text / Goto
 P+	 CH+ / Page+
 Tv Vol-	 Vol-
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4





Original	Replacement	Original	Replacement
	5		5
	6		6
	7		7
	8		8
	9		9
	Subtitle		Subtitle / EQ
	0		0
	Audio		Audio / Lang I/II
	Rec Mode	+	Shift + Rec / Rec Mode
	Timer		Sleep / Timer
	Edit		Smart / List
	Showview		Picture / Format

Original	Replacement	Original	Replacement

