
 


















Original	Replacement
	 Power
	 AV / Input / RDS
	 +  Shift + 8
	 TV/Radio /
	 Eject / Surround
	 +  Shift + Setup / OPT / Tools
	 OK
	 Exit / Cancel / Clear
	 Green / APP / Repeat
	 D.Menu / Top
	 Setup / OPT /
	 Up
	 Left
	 +  Shift + OK
	 Right
	 Down
	 Back / Return

Original	Replacement
	 Display / Media
	 << / Tune-
	 Play / Slow
	 Pause / Step / Freeze
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 Rec / Rec Mode
	 Stop / Hold
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 0
	 3





Original	Replacement
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Subtitle	 Subtitle / EQ
 2	 2
 Audio	 Audio / Lang I/II
 Rec Mode	 Shift + Rec / Rec Mode
 Timer	 Sleep / Timer
 Edit	 Zoom / Size
 Showview	 Smart / List

Original	Replacement

