












	Original	Replacement		Original	Replacement
	Tuner		Shift + 6		9
	Tape		Shift + 5		Mono/ST
	TV		Shift + 1		0
	V-CD		Shift + 2		Volume-
	CD		Shift + 3		Volume+
	DCC		Shift + 8		Mute
	VCR1		Shift + 4		FR.Direct
	VCR 2		Shift + 7		Preset-
	1		1		Preset+
	2		2		Sleep
	3		3		Display
	Standby		Power		Tuning-
	4		4		Tuning+
	5		5		Vol TV-
	6		6		Vol TV+
	7		7		Center Mode
	8		8		Center Up
					9
					Menu / Home
					0
					Vol-
					Vol+
					Mute / Dimmer
					D.Menu / Top
					I<< / Preset-
					>>I / Preset+
					Sleep / Timer
					Display / Media
					<< / Tune-
					>> / Tune+
					Shift + Vol-
					Shift + Vol+
					OK
					Up











 



























 


 








 









 

 









Original		Replacement		Original		Replacement	
	Rear Up		Right				
	Test Tone		Text / Goto				
	Center Down		Down				
	Rear Down		Left				
	Delay		Setup / OPT /				
	Dolby Pro Logic		Sound / Title				
	3 Stereo		Audio / Lang I/II				
	Hall		Subtitle / EQ				
	Surr.Off		Eject / Surround				





	Original	Replacement		Original	Replacement
	Tuner	 Shift + 6		8	 8
	Tape	 Shift + 5		9	 9
	TV	 Shift + 1		Disc Down	 CH- / Page-
	V-CD	 Shift + 2		0	 0
	CD	 Shift + 3		Volume-	 Vol-
	DCC	 Shift + 8		Volume+	 Vol+
	VCR 1	 Shift + 4		Mute	 Mute / Dimmer
	VCR 2	 Shift + 7		Play	 Play / Slow
	1	 1		I<	 I<< / Preset-
	2	 2		>I	 >>I / Preset+
	3	 3		Sleep	 Sleep / Timer
	Standby	 Power		Stop	 Stop / Hold
	4	 4		Display	 Display / Media
	5	 5		<<	 << / Tune-
	6	 6		Pause	 Pause / Step / Freeze
	Disc Up	 CH+ / Page+		>>	 >> / Tune+
	7	 7		Center Mode	 OK





Original		Replacement		Original		Replacement	
	Center Up		Up				
	Rear Up		Right				
	Test Tone		Text / Goto				
	Center Down		Down				
	Rear Down		Left				
	Delay		Setup / OPT /				
	Dolby Pro Logic		Sound / Title				
	3 Stereo		Audio / Lang I/II				
	Hall		Subtitle / EQ				
	Surr. Off		Eject / Surround				








































 


 








 






 

 








Original	Replacement	Original	Replacement
Tuner	Shift + 6	8	8
Tape	Shift + 5	9	9
TV	Shift + 1	Disc Down	CH- / Page-
V-CD	Shift + 2	0	0
CD	Shift + 3	Volume-	Vol-
DCC	Shift + 8	Volume+	Vol+
VCR 1	Shift + 4	Mute	Mute / Dimmer
VCR 2	Shift + 7	Play	Play / Slow
1	1	I<	I<< / Preset-
2	2	>I	>>I / Preset+
3	3	Sleep	Sleep / Timer
Standby	Power	Stop	Stop / Hold
4	4	Display	Display / Media
5	5	<<	<< / Tune-
6	6	Pause	Pause / Step / Freeze
Disc Up	CH+ / Page+	>>	>> / Tune+
7	7	Center Mode	OK




 
















Original	Replacement	Original	Replacement
 Tuner	 Shift + 6	 9	 9
 Tape	 Shift + 5	 -/--	 Guide / EPG / -/--
 TV	 Shift + 1	 0	 0
 V-CD	 Shift + 2	 TXT	 Text / Goto
 CD	 Shift + 3	 Rcvr Volume-	 Shift + Vol-
 DCC	 Shift + 8	 Rcvr Volume+	 Shift + Vol+
 VCR1	 Shift + 4	 Rcvr Mute	 Shift + Mute / Dimmer
 VCR2	 Shift + 7	 TV Mute	 Mute / Dimmer
 1	 1	 Enlarge	 Zoom / Size
 2	 2	 CH Down	 CH- / Page-
 3	 3	 CH Up	 CH+ / Page+
 Standby	 Power	 Sleep	 Sleep / Timer
 4	 4	 Hold	 Stop / Hold
 5	 5	 Display	 Display / Media
 6	 6	 Page-	 Shift + CH- /
 7	 7	 Cancel	 Exit / Cancel / Clear
 8	 8	 Page+	 Shift + CH+ / Page+





Original		Replacement		Original		Replacement	
	Vol TV -		Vol+				
	Vol TV +		Vol-				
	Center Mode		OK				
	Center Up		Up				
	Rear Up		Right				
	Test Tone		Shift + Text /				
	Center Down		Down				
	Rear Down		Left				
	Delay		Setup / OPT /				
	Dolby Pro Logic		Sound / Title				
	3 Stereo		Audio / Lang I/II				
	Hall		Subtitle / EQ				
	Surr.Off		Eject / Surround				

