 





 









 

 







 





 











 



 























Original	Replacement	Original	Replacement
 Source	 AV / Input / RDS	 >10	 Guide / EPG / -/-
 Power	 Power	 0/10	 0
 DVD	 Red / Netflix / Search	 C	 Exit / Cancel / Clear
 TUN	 Green / APP / Repeat	 Tv Vol+	 Shift + Vol+
 V1	 Blue / Prime Video / Random	 Tv Vol-	 Shift + Vol-
 V2	 Shift + Blue / Prime	 Up/FQ+	 Up
 A1	 Yellow / YouTube / Repeat	 Up/FQ+	 >> / Tune+
 A2	 Shift + Red / Netflix /	 Left/ST-	 Left
 1	 1	 Left/ST-	 I<< / Preset-
 2	 2	 Right/ST+	 Right
 3	 3	 Right/ST+	 >>I / Preset+
 4	 4	 Down/FQ-	 Down
 5	 5	 Down/FQ-	 << / Tune-
 6	 6	 Band	 Display / Media
 7	 7	 Station Memory	 Smart / List
 8	 8	 Mono	 Audio / Lang I/II
 9	 9	 1 Tv	 Shift + 1



 



















 










 























 

 












Original	Replacement
 2 Tv	 Shift + 2
 3 Tv	 Shift + 3
 4 Tv	 Shift + 4
 5 Tv	 Shift + 5
 6 Tv	 Shift + 6
 7 Tv	 Shift + 7
 8 Tv	 Shift + 8
 9 Tv	 Shift + 9
 >10 Tv	 Shift + Guide / EPG / -/-
 0/10 Tv	 Shift + 0
 C Tv	 Shift + Exit / Cancel / Clear
 Power Tv	 Shift + Power
 Up Tv	 Shift + Up
 Left Tv	 Shift + Left
 Enter Tv	 Shift + OK
 Right Tv	 Shift + Right
 Down Tv	 Shift + Down

Original	Replacement
 Menu Tv	 Shift + Menu /
 Stop Tv	 Shift + Stop /
 Play Tv	 Shift + Play /
 Pause Tv	 Shift + Pause / Step /
 Rec Tv	 Shift + Rec / Rec Mode
 I<< Tv	 Shift + I<< / Preset-
 >>I Tv	 Shift + >>I / Preset+
 CH- Tv	 Shift + CH- /
 CH+ Tv	 Shift + CH+ /
 << Tv	 Shift + << /
 >> Tv	 Shift + >> /
 PGM Tv	 Shift + D.Menu / Top Menu
 RDM Tv	 Shift + Subtitle / EQ
 Disp Tv	 Shift + Display / Media
 Last Memory Tv	 Shift + Back / Return



 





















 

 



















 



 

 










 








Original		Replacement		Original		Replacement	
	Source		AV / Input / RDS		Sleep		Sleep / Timer
	Power		Power		6		6
	DVD		Green / APP / Repeat		Time/Clock ADJ		Shift + Sleep / Timer
	TUN		Red / Netflix / Search		7		7
	V1		Blue / Prime Video / Random		[I]/DTS		Picture / Format
	V2		Shift + Blue / Prime		8		8
	A1		Yellow / YouTube / Repeat		Test Tone		Text / Goto
	A2		Shift + Red / Netflix /		9		9
	1		1		CH Select		Shift + Smart / List
	Midnight		Zoom / Size		>10		Guide / EPG / -/--
	2		2		Sound Control		Sound / Title
	P.Bass		Eject / Surround		0/10		0
	3		3		DSP		Setup / OPT /
	Function		Smart / List		C		Fav / Marker / PC
	4		4		Enter/Disc / DSP		Shift + OK
	FL Dimmer		Shift + Mute / Dimmer		TV CH+		Shift + CH+ /
	5		5		Tv Vol+		Shift + Vol+

 




















 







 






















 



 















Original	Replacement	Original	Replacement
 System	 Vol+	 Return	 Back / Return
 TV CH-	 Shift + CH- /	 I<</Page-	 I<< / Preset-
 Tv Vol-	 Shift + Vol-	 >>I/Page+	 >>I / Preset+
 System	 Vol-	 <II/CH-	 CH- / Page-
 Tv Input	 Shift + AV / Input / RDS	 II>/CH+	 CH+ / Page+
 Power Tv	 Shift + Power	 <<	 << / Tune-
 Mute	 Mute / Dimmer	 >>	 >> / Tune+
 Up/FQ+	 Up	 Top Menu	 D.Menu / Top
 Left/ST-	 Left	 PGM	 TV/Radio /
 Enter	 OK	 Subtitle	 Subtitle / EQ
 Right/ST+	 Right	 RDM	 Shift + Display / Media
 Down/FQ-	 Down	 Audio	 Audio / Lang I/II
 Exit	 Exit / Cancel / Clear	 Disp	 Display / Media
 Menu	 Menu / Home	 Last Memory	 Shift + Back / Return
 Stop	 Stop / Hold	 Angle	 Info / Angle
 Play	 Play / Slow	 Repeat	 Shift + Green / APP / Repeat
 Pause	 Pause / Step / Freeze	 A-B	 Shift + YouTube / Repeat





Original	Replacement	Original	Replacement
 Source	 AV / Input / RDS	 0/10	 0
 Power	 Power	 C	 Fav / Marker / PC
 DVD	 Green / APP / Repeat	 Up / Pause	 Up
 TUN	 Red / Netflix / Search	 Left/ <<	 Left
 V1	 Blue / Prime Video / Random	 Enter/Play	 Play / Slow
 V2	 Shift + Blue / Prime	 Right/ >>	 >> / Tune+
 A1	 Yellow / YouTube / Repeat	 Down/Stop	 Stop / Hold
 A2	 Shift + Red / Netflix /	 Down/Stop	 Down
 1	 1	 Enter/Play	 OK
 2	 2	 Up / Pause	 Pause / Step / Freeze
 3	 3	 < /CH-/ <<<	 CH- / Page-
 4	 4	 >/CH+/ >>>	 CH+ / Page+
 5	 5	 Left/ <<	 << / Tune-
 6	 6	 Right/ >>	 Right
 7	 7	 1 V2	 Shift + 1
 8	 8	 2 V2	 Shift + 2
 9	 9	 3 V2	 Shift + 3



 





 













 

 

 




 




 

 



















 













Original	Replacement	Original	Replacement
4 V2	SHIFT + 4	4	4
5 V2	SHIFT + 5	5	5
6 V2	SHIFT + 6	6	6
7 V2	SHIFT + 7	7	7
8 V2	SHIFT + 8	8	8
9 V2	SHIFT + 9	9	9
0/10 V2	SHIFT + 0	0/10	0
TV Channel+	SHIFT + CH+	TV CHANNEL	CH+ /
TV Channel- V2	SHIFT + CH-	TV CHANNEL	CH- /
Up / Pause V2	SHIFT + STEP-FREEZE	FO+ / STEP-FREEZE	Pause / Step /
Left/<< V2	SHIFT + TUNE-	ST- / TUNE-	<< /
Right/>> V2	SHIFT + TUNE+	ST+ / TUNE+	>> /
Down/Stop V2	SHIFT + HOLD	FO- / HOLD	Stop /
Down/Stop V2	SHIFT + DOWN	BAND / DOWN	Down
Up / Pause V2	SHIFT + UP	MONO / UP	Up
Left/<< V2	SHIFT + LEFT	LEFT	Left
Right/>> V2	SHIFT + RIGHT	RIGHT	Right

Original	Replacement


















 























 









Original	Replacement	Original	Replacement
 Source	 AV / Input / RDS	 >10	 Guide / EPG / -/--
 Power	 Power	 0/10	 0
 DVD	 Green / APP / Repeat	 C	 Fav / Marker / PC
 TUN	 Red / Netflix / Search	 Up/Pause	 Up
 V1	 Blue / Prime Video / Random	 Left/Left	 << / Tune-
 V2	 Shift + Blue / Prime	 Enter/Play	 OK
 A1	 Yellow / YouTube / Repeat	 Right/Right	 >> / Tune+
 A2	 Shift + Red / Netflix /	 Down/Down	 Stop / Hold
 1	 1	 Down/Stop	 Down
 2	 2	 Enter/Play	 Play / Slow
 3	 3	 Up/Pause	 Pause / Step / Freeze
 4	 4	 I<<	 I<< / Preset-
 5	 5	 >>I	 >>I / Preset+
 6	 6	 Left/Left	 Left
 7	 7	 Right/Right	 Right
 8	 8	 PGM/Top Menu	 TV/Radio /
 9	 9	 Subtitle/RDM	 Subtitle / EQ





Original	Replacement
 Audio/Disp	 Display / Media
 Repeat	 Shift + Green / APP /
 1 A2	 Shift + 1
 2 A2	 Shift + 2
 3 A2	 Shift + 3
 4 A2	 Shift + 4
 5 A2	 Shift + 5
 6 A2	 Shift + 6
 7 A2	 Shift + 7
 8 A2	 Shift + 8
 9 A2	 Shift + 9
 >10 A2	 Shift + Guide / EPG / -/-
 0/10 A2	 Shift + 0
 C A2	 Shift + Fav / Marker / PC
 Up/Pause A2	 Shift + Pause / Step /
 Left/ << A2	 Shift + << /
 Enter/Play A2	 Shift + Play /

Slow

Original	Replacement
 Right/ >> A2	 Shift + >> /
 Down/Stop A2	 Shift + Down
 Down/Stop A2	 Shift + Stop /
 Enter/Play A2	 Shift + OK
 Up/Pause A2	 Shift + Up
 I << A2	 Shift + I << / Preset-
 >> I A2	 Shift + >> I / Preset+
 Left/ << A2	 Shift + Left
 Right/ >> A2	 Shift + Right
 PGM/Top Menu	 Shift + TV/Radio / Program
 RDM/Subtitle A2	 Shift + Subtitle / EQ
 Audio Disp A2	 Shift + Display / Media
 Repeat A2	 Shift + Yellow / YouTube /

