



 


 
 



 

 










 






 

 



 



 






 
 

 
 
 
 
 
 












 
 

 

 


 
 

 












 



 


 
 
 

 






Original		Replacement		Original		Replacement	
	Power		Power		PC		Pre Ch
	Input1		Shift + 1		[II]		3D
	Input2		Shift + 2		[< >]		Format
	Input3		Shift + 3		[●]		AV
	Input4		Shift + 4		P+		Ch +
	Input5		Shift + 5		P-		Ch -
	1		1		Vol+		Vol +
	2		2		Vol-		Vol -
	3		3		Mute		Mute
	4		4		Power Source		Shift + Power
	5		5		Return		Back
	6		6		Menu/Home		Menu
	7		7		Exit		Exit
	8		8		Up		Up
	9		9		Down		Down
	0		0		Right		Right
	[i+]/Info/Timer		Info		Left		Left





Original		Replacement		Original		Replacement	
	Enter		Ok		[≡]		Text
	DVD Top		D. Menu		I-II/Disc Navi		Dual
	Red		Red		DVD/[I<>>]/[≡+]		Smart
	Green		Green		HDD/[<I>]/[≡◇]		Media
	Yellow		Yellow				
	Blue		Blue				
	Rec		Rec				
	Pause		Pause				
	Stop		Stop				
	Play		Play				
	I<<		I<<				
	>>I		>>I				
	<<		<<				
	>>		>>				
	[...]		Subt				
	[≡?]		List				
	[≡i]		Options				

