 

 

 

 

 

 

 
 
 
 
 
 
 

 
 
 

 
 
 

 



 
 
 

 
 

 
 
 


 
 


 




 


 
 
 

 
 


 
 


 

 

 

 

 



 

 




 

 
 
 


 
 

 

 
 

 





| Original | Replacement | Original | Replacement |
|--|---|---|---|
|  Standby/On |  Power |  Down |  Down |
|  Continued |  3D |  Right |  Right |
|  Open/Close |  Eject |  Left |  Left |
|  Audio |  Dual |  Enter |  Ok |
|  Subtitle |  Subt |  Red/Program |  Red |
|  Angle |  TV/R |  Green/Bookmar |  Green |
|  FL Dimmer |  Rec |  Yellow/Zoom |  Yellow |
|  CD/SACD |  Guide |  Blue/Index |  Blue |
|  HDMI |  Options |  << |  << |
|  Top Menu |  Shift + Menu |  Play |  Play |
|  Exit |  Exit |  >> |  >> |
|  Function |  D. Menu |  I<</>I</>I |  I<< |
|  Home Media |  Media |  Pause |  Pause |
|  Menu/PopUp |  Menu |  Stop |  Stop |
|  Home Menu |  Smart |  >>I/I>/I> |  >>I |
|  Return |  Back |  1 |  1 |
|  Up |  Up |  2 |  2 |





| Original | Replacement |
|---|--|
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Clear |  +  Shift + Exit |
|  2nd Video |  Format |
|  Keylook |  Sleep |
|  Replay |  Pre Ch |
|  A-B |  List |
|  Repeat |  Text |
|  2nd Audio |  +  Shift + Dual |
|  →/Skip Search |  AV |
|  Display |  Info |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





| Original | | Replacement | |
|----------|--------------------------|-------------|---------------|
| | Power Tv Control | | Power |
| | Input Select Tv Control | | AV |
| | CH+ Tv Control | | Ch + |
| | CH- Tv Control | | Ch - |
| | Vol+ Tv Control | | Vol + |
| | Vol- Tv Control | | Vol - |
| | Power Receiver | + | Shift + Power |
| | BD | | Smart |
| | Vol+ Receiver Control | + | Shift + Vol + |
| | Input ← Receiver Control | | Left |
| | Input → Receiver Control | | Right |
| | Vol- Receiver Control | + | Shift + Vol - |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

| Original | | Replacement | |
|----------|--|-------------|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

