 













 

 



 

 





 











Original	Replacement
 Power Receiver	 Power
 DVD	 2
 TV	 1
 VCR	 4
 CD-R	 3
 TUN	 6
 Test Tone	 Display / Media
 Input ATT	 TV/Radio /
 FL Dimmer	 Shift + Mute / Dimmer
 CH Select	 Smart / List
 CH Level-	 CH- / Page-
 CH Level+	 CH+ / Page+
 Effect-	 << / Tune-
 Effect+	 >> / Tune+
 Remote Setup	 Setup / OPT /
 Standard	 Subtitle / EQ
 Adv.Surr.	 Eject / Surround

Original	Replacement
 Stereo	 Audio / Lang I/II
 Input Sel	 AV / Input / RDS
 Signal Select	 Sound / Title
 Midnight / Loudness	 Sleep / Timer
 Mute	 Mute / Dimmer
 Up/Tune+	 Up
 Up/Tune+	 Shift + >> /
 Left/ST-	 Left
 Left/ST-	 Shift + I<< / Preset-
 Enter	 OK
 Right/ST+	 Right
 Right/ST+	 Shift + >>I / Preset+
 Down/Tune-	 Down
 Down/Tune-	 Shift + << /
 Master	 Vol+
 Master Volume-	 Vol-
 TV Vol+	 Shift + Vol+

























 























 



 









 









Original	Replacement	Original	Replacement
 Tv Vol-	 Shift + Vol-		
 TV Input	 Shift + AV / Input / RDS		
 TV Power	 Shift + Power		





Original		Replacement		Original		Replacement	
	Power DVD		Power		Channel+ DVD		CH+ / Page+
	1 DVD		1		Channel- DVD		CH- / Page-
	2 DVD		2		Up DVD		Up
	3 DVD		3		Down DVD		Down
	4 DVD		4		Right DVD		Right
	5 DVD		5		Left DVD		Left
	6 DVD		6		Enter DVD		OK
	7 DVD		7		Pause DVD		Pause / Step / Freeze
	8 DVD		8		Rec DVD		Rec / Rec Mode
	9 DVD		9		Play DVD		Play / Slow
	0 DVD		0		<< DVD		<< / Tune-
	+10 DVD		Guide / EPG / -/-		>> DVD		>> / Tune+
	Menu DVD		Menu / Home		>>I DVD		>>I / Preset+
	Top Menu DVD		D.Menu / Top		Stop DVD		Stop / Hold
	Master		Vol+		I<< DVD		I<< / Preset-
	Master volume-		Vol-		Audio DVD		Audio / Lang I/II
	Mute		Mute / Dimmer		Sub Title DVD		Subtitle / EQ











 











 







 



 







 










 


















Original	Replacement
Angle DVD	Info / Angle
Power VCR	Shift + Power
1 VCR	Shift + 1
2 VCR	Shift + 2
3 VCR	Shift + 3
4 VCR	Shift + 4
5 VCR	Shift + 5
6 VCR	Shift + 6
7 VCR	Shift + 7
8 VCR	Shift + 8
9 VCR	Shift + 9
0 VCR	Shift + 0
Disc VCR	Shift + Back / Return
Channel+ VCR	Shift + CH+ /
Channel- VCR	Shift + CH- /
Up VCR	Shift + Up
Down VCR	Shift + Down

Original	Replacement
Right VCR	Shift + Right
Left VCR	Shift + Left
Enter VCR	Shift + OK
Pause VCR	Shift + Pause / Step /
Play VCR	Shift + Play /
Stop VCR	Shift + Stop /
<< VCR	Shift + << /
>>I VCR	Shift + >>I / Preset+
>> VCR	Shift + >> /
I<< VCR	Shift + I<< / Preset-
Rec VCR	Shift + Rec / Rec Mode





Original	Replacement	Original	Replacement
 Power CD	 Power	 Channel- CD	 CH- / Page-
 1 CD	 1	 Up CD	 Up
 2 CD	 2	 Down CD	 Down
 3 CD	 3	 Right CD	 Right
 4 CD	 4	 Left CD	 Left
 5 CD	 5	 Enter CD	 OK
 6 CD	 6	 Pause CD	 Pause / Step / Freeze
 7 CD	 7	 Play CD	 Play / Slow
 8 CD	 8	 << CD	 << / Tune-
 9 CD	 9	 >> CD	 >> / Tune+
 0 CD	 0	 >>> CD	 >>> / Preset+
 +10 CD	 Guide / EPG / -/--	 I<<< CD	 I<<< / Preset-
 Disc CD	 Back / Return	 Stop CD	 Stop / Hold
 Master	 Vol+	 Power TVC	 Shift + Power
 Master Volume-	 Vol-	 1 TVC	 Shift + 1
 Mute	 Mute / Dimmer	 2 TVC	 Shift + 2
 Channel+ CD	 CH+ / Page+	 3 TVC	 Shift + 3






 






 










 





















 




 







Original	Replacement
4 TVC	Shift + 4
5 TVC	Shift + 5
6 TVC	Shift + 6
7 TVC	Shift + 7
8 TVC	Shift + 8
9 TVC	Shift + 9
0 TVC	Shift + 0
+10 TVC	Shift + Guide / EPG / --
Disc TVC	Shift + Back / Return
Menu TVC	Shift + Menu /
Up TVC	Shift + Up
Down TVC	Shift + Down
Right TVC	Shift + Right
Left TVC	Shift + Left
Enter TVC	Shift + OK
Pause TVC	Shift + Pause / Step /
Rec TVC	Shift + Rec / Rec Mode

Original	Replacement
Play TVC	Shift + Play /
Stop TVC	Shift + Stop /
<< TVC	Shift + << /
>>I TVC	Shift + >>I / Preset+
>> TVC	Shift + >> /
I<< TVC	Shift + I<< / Preset-





Original	Replacement	Original	Replacement
 Power TUN	 Power	 Left TUN	 Left
 1 TUN	 1	 D.Access TUN	 Play / Slow
 2 TUN	 2	 Band TUN	 Smart / List
 3 TUN	 3	 T.Edit	 Pause / Step / Freeze
 4 TUN	 4	 Class TUN	 << / Tune-
 5 TUN	 5	 RF ATT TUN	 >> / Tune+
 6 TUN	 6	 MPX TUN	 Stop / Hold
 7 TUN	 7	 Display TUN	 Display / Media
 8 TUN	 8	 Power CDR	 Shift + Power
 9 TUN	 9	 1 CDR	 Shift + 1
 0 TUN	 0	 2 CDR	 Shift + 2
 Master	 Vol+	 3 CDR	 Shift + 3
 Master volume-	 Vol-	 4 CDR	 Shift + 4
 Mute	 Mute / Dimmer	 5 CDR	 Shift + 5
 Up TUN	 Up	 6 CDR	 Shift + 6
 Down TUN	 Down	 7 CDR	 Shift + 7
 Right TUN	 Right	 8 CDR	 Shift + 8





Original	Replacement
9 CDR	Shift + 9
0 CDR	Shift + 0
+10 CDR	Shift + Guide / EPG / -/-
Channel+ CDR	Shift + CH+ /
Channel- CDR	Shift + CH- /
Up CDR	Shift + Up
Down CDR	Shift + Down
Right CDR	Shift + Right
Left CDR	Shift + Left
Enter CDR	Shift + OK
Pause CDR	Shift + Pause / Step /
Play CDR	Shift + Play /
Stop CDR	Shift + Stop /
<< CDR	Shift + << /
Rec CDR	Shift + Rec / Rec Mode
I<< CDR	Shift + I<< / Preset-
>> CDR	Shift + >> /

Tune+

Original	Replacement
>>I CDR	Shift + >>I / Preset+

