



Original	Replacement
 Receiver Power	 Power
 Input Select-	 CH- / Page-
 Input Select+	 CH+ / Page+
 TV Control Input	 Shift + AV / Input / RDS
 TV Control Power	 Shift + Power
 BD	 2
 TV	 1
 DVR	 5
 TV Control CH+	 Shift + CH+ /
 CD	 3
 CD-R	 9
 TUNER	 6
 TV Control CH-	 Shift + CH- /
 VIDEO	 4
 AUX	 7
 TV Control Vol+	 Shift + Vol+
 iPod USB	 8

Original	Replacement
 Dimmer	 Shift + Mute / Dimmer
 Signal Sel	 Picture / Format
 TV Control Vol-	 Shift + Vol-
 Auto / Direct	 Red / Netflix / Search
 Stereo / ALC	 Green / APP / Repeat
 Standard	 Yellow / YouTube / Repeat
 Adv Surr	 Blue / Prime Video / Random
 Audio	 Audio / Lang I/II
 Master	 Vol+
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Master Volume-	 Vol-
 Setup	 Setup / OPT /
 Return	 Back / Return





Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	Bass-		l<< / Preset-
	Bass+		>>l / Preset+
	Tre-		<< / Tune-
	Tre+		>> / Tune+
	Display		Display / Media
	S.Retriever		Sound / Title
	EQ		Subtitle / EQ
	CH Select		Shift + OK
	Sleep		Sleep / Timer
	SB CH		Zoom / Size
	Phase		TV/Radio /
	CH Level+		Shift + Up
	Midnight		Text / Goto
	Speakers		Eject / Surround
	CH Level-		Shift + Down

Original	Replacement




 



Original		Replacement		Original		Replacement	
	Power Source		Power		1		1
	Tuner		Shift + 6		2		2
	Menu		Menu / Home		3		3
	Master Volume		Vol+		Display		Display / Media
	Tune+		>> / Tune+		4		4
	Tune+		Up		5		5
	Preset-		<< / Preset-		6		6
	Preset-		Left		7		7
	Enter		OK		8		8
	Preset+		>> / Preset+		9		9
	Preset+		Right		0		0
	Tune-		<< / Tune-				
	Tune-		Down				
	Master Volume		Vol-				
	Search		Red / Netflix / Search				
	Band		Subtitle / EQ				
	Mute		Mute / Dimmer				





Original	Replacement
 Receiver Power	 Power
 Input Select-	 CH- / Page-
 Input Select+	 CH+ / Page+
 TV Control Input	 Shift + AV / Input / RDS
 TV Control Power	 Shift + Power
 BD	 2
 TV	 1
 DVR	 5
 TV Control CH+	 Shift + CH+ /
 CD	 3
 CD-R	 9
 TUNER	 6
 TV Control CH-	 Shift + CH- /
 VIDEO	 4
 AUX	 7
 TV Control Vol+	 Shift + Vol+
 iPod USB	 8

Original	Replacement
 Dimmer	 Shift + Mute / Dimmer
 Signal Sel	 Picture / Format
 TV Control Vol-	 Shift + Vol-
 Auto / Direct	 Red / Netflix / Search
 Stereo / ALC	 Green / APP / Repeat
 Standard	 Yellow / YouTube / Repeat
 Adv Surr	 Blue / Prime Video / Random
 Audio	 Audio / Lang I/II
 Master	 Vol+
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Master Volume-	 Vol-
 Setup	 Setup / OPT /
 Return	 Back / Return



