

 





























 





Original	Replacement
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Smart / List
	 0
	 Guide / EPG / -/--
	 Menu / Home
	 AV / Input / RDS
	 Up

Original	Replacement
	 Left
	 OK
	 Right
	 Back / Return
	 Down
	 Exit / Cancel / Clear
	 Vol+
	 Info / Angle
	 CH+ / Page+
	 Vol-
	 Setup / OPT /
	 CH- / Page-
	 TV/Radio /
	 Audio / Lang I/II
	 Text / Goto
	 Subtitle / EQ
	 Shift + Smart / List





Original	Replacement	Original	Replacement
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	PRE-CH		Fav / Marker / PC
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original	Replacement	Original	Replacement

