







 



 



 



 







 



 







 



 



 



 














 


 




 


 
 
 

 
 
 





Original		Replacement		Original		Replacement	
	Internet		Smart / List		Sleep		Sleep / Timer
	Power		Power		1		1
	Rec		Rec / Rec Mode		2		2
	Play		Play / Slow		3		3
	Pause		Pause / Step / Freeze		4		4
	Stop		Stop / Hold		5		5
	I<<		I<< / Preset-		6		6
	<<		<< / Tune-		7		7
	>>		>> / Tune+		8		8
	>>I		>>I / Preset+		9		9
	Screen		Picture / Format		Source		AV / Input / RDS
	Lang		Audio / Lang I/II		0		0
	Subtitle		Subtitle / EQ		Swap		D.Menu / Top
	Presets		Setup / OPT /		Menu		Menu / Home
	EPG		Guide / EPG / -/--		Mute		Mute / Dimmer
	Text		Text / Goto		P+		CH+ / Page+
	FAV		Fav / Marker / PC		Up		Up





Original		Replacement		Original		Replacement	
	V+		Vol+				
	Left		Left				
	Ok		OK				
	Right		Right				
	P-		CH- / Page-				
	Down		Down				
	V-		Vol-				
	Back		Back / Return				
	Exit		Exit / Cancel / Clear				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Multimedia		Display / Media				
	My Button1		Eject / Surround				
	My Button2		TV/Radio /				
	Info		Info / Angle				

