
 
 
 
 
 
 

 






 


 

 
 
 
 


 


 
 
 

 
 




| Original | Replacement | Original | Replacement |
|----------------|---|-----------------|---|
| Power ON/Off |  Power | Woofer/Speed |  Back |
| Mute |  Mute | CD Rewind |  << |
| Every Pop |  3D | CD F.FWD |  >> |
| Tape 1 Preset |  List | Volume+ |  Vol + |
| Vol Rs-/Effect |  Subt | CD Pause |  Pause |
| Tape 1 Stop |  +  Shift + Stop | Volume- |  Vol - |
| Preset Pause |  +  Shift + Pause | Tape 1 Hall/Ats |  Options |
| Sleep |  Sleep | Pr 1 |  1 |
| CD Random |  TV/R | Pr 2 |  2 |
| Tape 2 Pre./eq |  Dual | Pr 3 |  3 |
| Repeat |  Text | Pr 4 |  4 |
| Vol Rs+/S.Mode |  Eject | Pr 5 |  5 |
| Input/Source |  AV | Pr 6 |  6 |
| CD/Theater |  Media | Pr 7 |  7 |
| Display |  Info | Pr 8 |  8 |
| CD Play |  Play | Program |  +  Shift + Sleep |
| Funct./Direct |  Smart | Pr 9 |  9 |



