



Original	Replacement
 Power	 Power
 Eject	 Eject / Surround
 Subtitle	 Subtitle / EQ
 1	 1
 2	 2
 3	 3
 Angle	 Info / Angle
 4	 4
 5	 5
 6	 6
 Audio	 Audio / Lang I/II
 7	 7
 8	 8
 9	 9
 Osd	 Display / Media
 Time	 Sleep / Timer
 10+	 Guide / EPG / -/--

Original	Replacement
 0	 0
 PS/IS	 Smart / List
 Title	 Sound / Title
 Prog	 TV/Radio /
 Clear	 Exit / Cancel / Clear
 Setup	 Setup / OPT /
 Up	 Up
 Left	 Left
 Ok	 OK
 Right	 Right
 Down	 Down
 Return	 Back / Return
 Menu	 Menu / Home
 Pbc	 Picture / Format
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow





Original		Replacement		Original		Replacement	
	>>I		>>I / Preset+				
	>>		>> / Tune+				
	Stop		Stop / Hold				
	I<<		I<< / Preset-				
	Zoom		Zoom / Size				
	Step		Shift + Pause / Step /				
	Slow		Shift + Play /				
	Vol+		Vol+				
	Mute		Mute / Dimmer				
	3D		Shift + 3				
	Ran		D.Menu / Top				
	Vol-		Vol-				
	N/P		Red / NetfliX / Search				
	R/L		Blue / Prime Video / Random				
	A/B		Yellow / YouTube / Repeat				
	Repeat		Green / APP / Repeat				

