



Original	Replacement
 Power	 Power
 Eject	 Eject / Surround
 Subtitle	 Subtitle / EQ
 1	 1
 2	 2
 3	 3
 Angle	 Info / Angle
 4	 4
 5	 5
 6	 6
 Audio	 Audio / Lang I/II
 7	 7
 8	 8
 9	 9
 Osd	 Display / Media
 Time	 Sleep / Timer
 10+	 Guide / EPG / -/--

Original	Replacement
 0	 0
 PS/IS	 Smart / List
 Title	 Sound / Title
 Prog	 TV/Radio /
 Clear	 Exit / Cancel / Clear
 Setup	 Setup / OPT /
 Up	 Up
 Left	 Left
 Ok	 OK
 Right	 Right
 Down	 Down
 Return	 Back / Return
 Menu	 Menu / Home
 Pbc	 Picture / Format
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow





Original	Replacement
	PRESET+ >>I / Preset+
	TUNE+ >> / Tune+
	HOLD Stop / Hold
	PRESET- I<< / Preset-
	SIZE ZOOM Zoom / Size
	SHIFT + STEP-FREEZE Shift + Pause / Step /
	SHIFT + SLOW Shift + Play /
	+ Vol+
	DIMMER MUTE Mute / Dimmer
	SHIFT + CD- STB 3 Shift + 3
	TOP MENU D.MENU D.Menu / Top
	VOL - Vol-
	NETFLIX SEARCH Red / Netflix / Search
	Prime Video RANDOM Blue / Prime Video / Random
	YouTube REPEAT A-B Yellow / YouTube / Repeat
	APP REPEAT Green / APP / Repeat

Original	Replacement

