









 





 

 











 







 



 











 





 





 

 











 











Original		Replacement		Original		Replacement	
	Power		Power		Up		Up
	Stop		Stop / Hold		Left		Left
	Pause		Pause / Step / Freeze		OK		OK
	Rec		Rec / Rec Mode		Right		Right
	<<		<< / Tune-		Exit		Exit / Cancel / Clear
	Play		Play / Slow		Down		Down
	>>		>> / Tune+		III/Options		Setup / OPT /
	Guide		Guide / EPG / -/--		Back		Back / Return
	3D		Eject / Surround		CH-		CH- / Page-
	Ambilight		Display / Media		CH+		CH+ / Page+
	Source		AV / Input / RDS		Vol-		Vol-
	TV		TV/Radio /		Mute		Mute / Dimmer
	[<>]/Format		Picture / Format		Vol+		Vol+
	Home		Menu / Home		Red		Red / Netflix / Search
	Smart Tv		Smart / List		Green		Green / APP / Repeat
	≡/List		Shift + Smart / List		Yellow		Yellow / YouTube / Repeat
	[i]/Info		Info / Angle		Blue		Blue / Prime Video / Random





	Original	Replacement		Original	Replacement
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	Subtitle		Subtitle / EQ		
	0		0		
	[≡]/Text		Text / Goto		

