



Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 TV / AV	 AV
 1	 1	 Sleep	 Sleep
 2	 2	 Up / PR+	 Up
 3	 3	 Up / PR+	 Ch +
 4	 4	 Down / PR-	 Down
 5	 5	 Down / PR-	 Ch -
 6	 6	 Right / Vol+	 Right
 7	 7	 Right / Vol+	 Vol +
 8	 8	 Left / Vol-	 Left
 9	 9	 Left / Vol-	 Vol -
 0	 0	 OK	 Ok
 *	 Guide	 Text / Mix	 Text
 *	 Pre Ch	 Q.View	 Options
 PSM	 Format	 List	 List
 SSM	 Shift + Dual	 Red	 Red
 I/II	 Dual	 Green	 Green





Original		Replacement		Original		Replacement	
	Yellow		Yellow				
	Blue		Blue				
	Update		Subt				
	Time		Eject				
	Reveal		TV/R				
	Hold		Stop				
	PIP/*		3D				
	ARC		Smart				
	TV / PC		Back				
	Position/*		Media				
	Swap/*		Shift + Media				
	Input/*		Shift + AV				
	Mode/*		Shift + 3D				
	PR+/*		Shift + Ch +				
	PR-/*		Shift + Ch -				

