 















 



 
 



 
 

 
 






 



 



 



 



 


 
 



 











| Original  | Replacement   | Original   | Replacement   |
|---|---|--|---|
|  Power |  Power                       |  Tv Guide |  Guide / EPG / -/--      |
|  Mute  |  Mute / Dimmer               |  0        |  0                       |
|  DTV   |  Shift + 1                   |  Recall   |  Back / Return           |
|  DTV   |  TV/Radio /                  |  Vol+     |  Vol+                    |
|  Radio |  Shift + TV/Radio / Program |  P.Mode   |  Picture / Format        |
|  Radio |  Shift + 6                   |  CH+      |  CH+ / Page+             |
|  USB   |  Shift + 8                   |  S.Mode   |  Sound / Title           |
|  DVD   |  Shift + 2                   |  Vol-     |  Vol-                    |
|  1     |  1                           |  FAV      |  Fav / Marker / PC       |
|  2     |  2                           |  CH-      |  CH- / Page-             |
|  3    |  3                          |  Menu    |  Menu / Home            |
|  4   |  4                         |  Up     |  Up                    |
|  5   |  5                         |  Exit   |  Exit / Cancel / Clear |
|  6   |  6                         |  Left   |  Left                  |
|  7   |  7                         |  OK     |  OK                    |
|  8   |  8                         |  Right  |  Right                 |
|  9   |  9                         |  Source |  AV / Input / RDS      |





| Original  | Replacement     | Original  | Replacement                 |
|---|-----------------|---|-----------------------------|
|      | Down            |      | Down                        |
|      | Info            |      | Info / Angle                |
|      | Aspect          |      | Shift + Picture / Format    |
|      | Sleep           |      | Sleep / Timer               |
|      | Audio           |      | Audio / Lang I/II           |
|      | Subtitle        |      | Subtitle / EQ               |
|      | Text            |      | Text / Goto                 |
|      | Text Hold       |      | Shift + Stop /              |
|      | Zoom/Text/DVD   |      | Zoom / Size                 |
|      | Power/Display   |      | Display / Media             |
|     | Power/Display   |     | Shift + Power               |
|    | DVD Menu        |    | D.Menu / Top                |
|    | Rec             |    | Rec / Rec Mode              |
|    | I<<             |    | I<< / Preset-               |
|    | >>I             |    | >>I / Preset+               |
|    | Stop/Eject      |    | Stop / Hold                 |
|    | Stop/Eject      |    | Eject / Surround            |
|    | Rec List/DVD    |    | Setup / OPT /               |
|    | Rec List/DVD    |    | Smart / List                |
|    | <<< PVR/DVD     |    | <<< / Tune-                 |
|    | >>> PVR/DVD     |    | >>> / Tune+                 |
|    | Pause           |    | Pause / Step / Freeze       |
|    | Play            |    | Play / Slow                 |
|    | Red/Goto        |    | Shift + Text /              |
|    | Red/Goto        |    | Red / Netflix / Search      |
|    | Green/A-B       |    | Green / APP / Repeat        |
|    | Green/A-B       |    | Shift + Yellow / YouTube /  |
|   | Yellow/Angle/3D |   | Yellow / YouTube / Repeat   |
|  | Yellow/Angle/3D |  | Shift + Info / Angle        |
|  | Blue/Repeat     |  | Blue / Prime Video / Random |
|  | Blue/Repeat     |  | Shift + Green / APP /       |

