
 
 

 



 
 

 
 
 
 

 

 
 
 

 

 


 

 

 
 

 


 




 
 
 

 

 

 





 

 







 





Original	Replacement	Original	Replacement
 Power	 Power	 Return	 Back / Return
 i Info / Angle	 ANGLE INFO Info / Angle	 Vol +	 Vol+
 1	 TV 1	 Vol -	 Vol-
 2	 DVD 2	 Up	 Up
 3	 CD - STB 3	 Down	 Down
 4	 VIDEO 4	 Right	 Right
 5	 TAPE 5	 Left	 Left
 6	 TUNER 6	 ENTER/ CH LIST CH List	 LIST SMART Smart / List
 7	 AUX - HDD 7	 ENTER/ CH LIST Enter / CH List	 OK OK
 8	 USB 8	 P +	 + CH PAGE CH+ / Page+
 9	 BLUETOOTH 9	 P -	 - CH PAGE CH- / Page-
 0	 HDMI - BAT 0	 AUDIO I/II Audio I/II	 LANG I/II AUDIO Audio / Lang I/II
 Input Select	 RDS AV INPUT AV / Input / RDS	 Text	 GOTO TEXT Text / Goto
 Picture Size	 FORMAT PICTURE Picture / Format	 P <--> P	 PC FAV MARKER Fav / Marker / PC
 Guide (EPG)	 -/-- GUIDE EPG Guide / EPG / -/--	 [≡?]	 PROGRAM TV/RADIO TV/Radio /
 Mute	 DIMMER MUTE Mute / Dimmer	 Subtitle	 EQ SUBTITLE Subtitle / EQ
 Menu	 HOME MENU Menu / Home	 Freeze	 STEP - FREEZE II Pause / Step / Freeze



