 

 

 

 

 




 
 

 

 



 

 


 




Original	Replacement	Original	Replacement
	Power		Power
	Info		Info / Angle
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	O)/I-II/Audio		Audio / Lang I/II
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear

Original	Replacement	Original	Replacement
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	CH+		CH+ / Page+
	Index		Display / Media
	Vol+		Vol+
	CH-		CH- / Page-
	List/Repeat		Smart / List
	Vol-		Vol-
	♥/Title		Fav / Marker / PC
	Sleep/Menu		Sleep / Timer
	EPG/Setup		Guide / EPG / -/-
	Recall		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-





Original	Replacement	Original	Replacement
	Green Green / APP / Repeat		
	>> >> / Tune+		
	Yellow Yellow / YouTube / Repeat		
	l<< l<< / Preset-		
	Blue Blue / Prime Video / Random		
	>>l >>l / Preset+		
	[=] Text / Goto		
	Play Play / Slow		
	Pause Pause / Step / Freeze		
	[=+] Picture / Format		
	Stop/Still Stop / Hold		
	Radio/Open/Close TV/Radio /		
	[=♦]/[++] Zoom / Size		
	[=x] Setup / OPT /		
	[=o]/Subtitle Subtitle / EQ		
	DMP D.Menu / Top		
	Rec Rec / Rec Mode		

