
 
 
 

 



 

 
 
 
 

 



 


 
 

 
 
 

 
 


 


 

 
 
 
 
 




Original		Replacement		Original		Replacement	
	Power		Power		PIP		Shift + 1
	Red		Red		PIP Up		Shift + 2
	Green		Green		PIP Swap		Shift + 3
	Yellow		Yellow		Audio		Dual
	Blue		Blue		Mute		Mute
	Up		Up		P+		Ch +
	Left		Left		P-		Ch -
	OK		Ok		Vol+		Vol +
	Right		Right		Vol-		Vol -
	Down		Down		Text		Text
	Pause		Pause		[≡i]		Shift + 4
	Back		Back		[≡...]		Shift + 5
	Menu		Menu		[≡?]		Shift + 6
	EPG		Guide		1		1
	[i+]		Info		2		2
	Format		Format		3		3
	Input		AV		4		4



