




 



 

 

 




 







 


















 

 

 







 





 

 

 




Original	Replacement	Original	Replacement
 POWER	 Power	 SOURCE	 AV
 AUDIO / I/II	 Dual	 INFO	 Info
 MUTE	 Mute	 UP	 Up
 1	 1	 LEFT	 Left
 2	 2	 OK	 Ok
 3	 3	 RIGHT	 Right
 4	 4	 DOWN	 Down
 5	 5	 VOL+	 Vol +
 6	 6	 VOL-	 Vol -
 7	 7	 CH-	 Ch -
 8	 8	 CH+	 Ch +
 9	 9	 P. MODE	 Format
 0	 0	 S.MODE	 Shift + Dual
 SLEEP	 Sleep	 P. SIZE	 Eject
 REPEAT	 Shift + Text	 GUIDE	 Guide
 EXIT	 Exit	 LIST	 List
 MENU	 Menu	 DTV / RADIO	 TV/R





	Original	Replacement	Original	Replacement
	FAV CH.	 Pre Ch		
	SUBTITLE	 Subt		
	PLAY / PAUSE	 Play		
	PLAY / PAUSE	 Pause		
	TS	 Options		
	STOP	 Stop		
	REC	 Rec		
	TEXT / GO TO	 Text		
	RED	 Red		
	I<<	 I<<		
	GREEN	 Green		
	>>I	 >>I		
	YELLOW	 Yellow		
	REW	 <<		
	BLUE	 Blue		
	FWD	 >>		

