



 

 



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Jump		Back
	-/--		Shift + Guide
	S.Mode		Shift + Dual
	I-II		Dual
	P.Mode		Format
	Guide		Guide
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Input		AV
	Menu		Menu
	Fav. CH		Pre Ch
	Vol. +		Vol +
	Vol.-		Vol -
	CH. +		Ch +
	CH.-		Ch -
	Rec		Rec
	DTV / Radio		TV/R
	Sleep		Sleep





Original	Replacement
 Subtitle	 Subt
 P.Size	 Eject
 Subpage	 Shift + Subt
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 [=i]	 Smart
 [=?]	 Media
 [=↓]	 3D
 [=□]	 Shift + Stop
 [=] / [ / =]	 Text
 Stop	 Stop
 Play/Pause / Timeshift	 Play
 Play/Pause / Timeshift	 Pause
 Info	 Info
 I<<	 I<<

Original	Replacement
 >>	 >>
 <<	 <<
 >>	 >>

