 





 

 

 

 

 

 

 

 

 

 

 

 



 

 

 

 

 

 





 

 

 

 

 

 

 

 









Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Source		AV / Input / RDS		CH List		Smart / List
	1		1		CH-		CH- / Page-
	2		2		Sports		TV/Radio /
	3		3		Home		Menu / Home
	4		4		Guide		Guide / EPG / -/--
	5		5		Extra		Picture / Format
	6		6		Up		Up
	7		7		Info		Info / Angle
	8		8		Left		Left
	9		9		Enter		OK
	TTX/MIX		Text / Goto		Right		Right
	0		0		Return		Back / Return
	PRE-CH		Fav / Marker / PC		Down		Down
	Vol+		Vol+		Exit		Exit / Cancel / Clear
	Mute		Mute / Dimmer		Red		Red / Netflix / Search
	CH+		CH+ / Page+		Green		Green / APP / Repeat



