



 









 





 





 





 



 



 

 

 
 






 







 

 

 

 





Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 HDMI	 Shift + 0
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TTX/MIX	 Text / Goto
 0	 0
 PRE-CH	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer

Original	Replacement
 PR+	 CH+ / Page+
 Vol-	 Vol-
 CH List	 Display / Media
 PR-	 CH- / Page-
 Menu	 Menu / Home
 Smart Hub	 Smart / List
 Guide	 Guide / EPG / -/--
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red/A	 Red / Netflix / Search





Original	Replacement	Original	Replacement
 Green/B	 Green / APP / Repeat		
 Yellow/C	 Yellow / YouTube / Repeat		
 Blue/D	 Blue / Prime Video / Random		
 Family Story	 Picture / Format		
 Search	 Shift + Red / Netflix /		
 3D	 Shift + 3		
 Support	 D.Menu / Top		
 P.Size	 Zoom / Size		
 AD/Subt	 Subtitle / EQ		
 <</I<<	 << / Tune-		
 <</I<<	 I<< / Preset-		
 Pause	 Pause / Step / Freeze		
 >>/>>I	 >> / Tune+		
 >>/>>I	 >>I / Preset+		
 Rec	 Rec / Rec Mode		
 Play	 Play / Slow		
 Stop	 Stop / Hold		

