



Original	Replacement	Original	Replacement
Power	Power	Vol-	Vol-
TV	TV/Radio /	Source	AV / Input / RDS
1	1	PR-	CH- / Page-
2	2	CH List	Smart / List
3	3	Menu	Menu / Home
4	4	FAV CH	Fav / Marker / PC
5	5	Tools	Setup / OPT /
6	6	Return	Shift + Back / Return
7	7	Up	Up
8	8	Left	Left
9	9	Enter	OK
[]	Display / Media	Right	Right
0	0	Info	Info / Angle
PRE-CH	Back / Return	Down	Down
Vol+	Vol+	Exit	Exit / Cancel / Clear
Mute	Mute / Dimmer	Red	Red / Netflix / Search
PR+	CH+ / Page+	Green	Green / APP / Repeat





Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 TTX/MIX	 Text / Goto
 SRS	 Sound / Title
 P.Size	 Zoom / Size
 Dual/I/II	 Audio / Lang I/II
 Guide	 Guide / EPG / -/--
 Subt	 Subtitle / EQ
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Stop	 Stop / Hold

Original	Replacement

