


 
 
 







 

 


 
 

 

 




 



 
 


 




 










Original	Replacement	Original	Replacement
 View DVD	 Media	 Timer	 Shift + AV
 View VCR	 Shift + Media	 F.ADV / Step	 Pre Ch
 TV / VCR	 TV/R	 I<<	 I<<
 Input SEL.	 AV	 Rec	 Rec
 Standby / On	 Power	 Speed	 Sleep
 Open / Close	 Eject	 >>I	 >>I
 Info	 Info	 <<	 <<
 1	 1	 Stop	 Stop
 2	 2	 Play	 Play
 3	 3	 Pause	 Pause
 4	 4	 >>	 >>
 5	 5	 TRK +	 Vol +
 6	 6	 TRK -	 Vol -
 7	 7	 Audio	 Dual
 8	 8	 Prog +	 Ch +
 9	 9	 Prog -	 Ch -
 0	 0	 Menu	 Menu



