



Original		Replacement		Original		Replacement	
	Power		Power		Source		AV
	TV		TV/R		P+		Ch +
	1		1		P-		Ch -
	2		2		CH List		List
	3		3		Menu		Menu
	4		4		FAV CH		Shift + Pre Ch
	5		5		Tools		Options
	6		6		Return		Back
	7		7		Info		Info
	8		8		Exit		Exit
	9		9		Up		Up
	0		0		Down		Down
	Enter		Smart		Right		Right
	PRE-CH		Pre Ch		Left		Left
	Vol+		Vol +		OK		Ok
	Vol-		Vol -		Red		Red
	Mute		Mute		Green		Green





Original		Replacement		Original		Replacement	
	Yellow		Yellow				
	Blue		Blue				
	TTX/Mix		Text				
	Media.P		Media				
	P.Size		Format				
	Dual		Dual				
	Guide		Guide				
	Subt.		Subt				
	<<		<<				
	Pause		Pause				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

