




Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TTX/MIX	 Text / Goto
 0	 0
 Pre-CH	 Back / Return
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
 CH List	 Smart / List
 P-	 CH- / Page-
 Media.P	 Display / Media
 Menu	 Menu / Home
 Guide	 Guide / EPG / -/-
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Shift + Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original		Replacement	
	Yellow	 REPEAT A-B	Yellow / YouTube / Repeat
	Blue	 RANDOM	Blue / Prime Video / Random
	E-Manual	 TOP MENU	D.Menu / Top
	3D	 + 	Shift + 3
	AD/Subt.	 EQ	Subtitle / EQ
	AD/Subt.	 AUDIO	Audio / Lang I/II
	Stop		Stop / Hold
	<</I<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>/>>I		>> / Tune+

Original		Replacement	

