



Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu
 Tv	 TV/R	 Return	 Back
 1	 1	 Info	 Info
 2	 2	 Exit	 Exit
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 Enter	 Eject
 8	 8	 Red	 Red
 9	 9	 Green	 Green
 0	 0	 Yellow	 Yellow
 Enter	 Ok	 Blue	 Blue
 PRE-CH	 Pre Ch	 Vol +	 Vol +
 CH LIST	 List	 Vol -	 Vol -
 FAV CH	 Shift + Pre Ch	 Mute	 Mute
 Tools	 Options	 Source	 AV





Original	Replacement	Original	Replacement
	PR+		Ch +
	PR-		Ch -
	TTX/MIX		Text
	Media.P		Media
	P.Size		Format
	Dual		Dual
	Guide		Guide
	Subt		Subt
	<<		<<
	Pause		Pause
	>>		>>
	Rec		Rec
	Play		Play
	Stop		Stop

