







 

 





 



 





















Original	Replacement	Original	Replacement
 Standby/On	 Power	 7	 7
 Eject	 Eject / Surround	 8	 8
 Index	 Info / Angle	 9	 9
 Rec Speed	 Setup / OPT /	 +	 Vol+
 CLK/Count	 D.Menu / Top	 CH+	 CH+ / Page+
 Picture	 Picture / Format	 100	 Guide / EPG / -/-
 Timer	 Sleep / Timer	 0	 0
 1	 1	 CLR/RST	 Exit / Cancel / Clear
 2	 2	 -	 Vol-
 3	 3	 CH-	 CH- / Page-
 Strobe	 Blue / Prime Video / Random	 <<	 << / Tune-
 Audio	 Audio / Lang I/II	 Play	 Play / Slow
 4	 4	 >>	 >> / Tune+
 5	 5	 Rec	 Rec / Rec Mode
 6	 6	 Stop	 Stop / Hold
 Art	 Text / Goto	 Pause/Still	 Pause / Step / Freeze
 Input	 AV / Input / RDS	 Display	 Display / Media





Original	Replacement	Original	Replacement
 Monitor	 Yellow / YouTube / Repeat		
 A.Dub	 Sound / Title		
 Input System	 Red / Netflix / Search		
 Up	 Up		
 Output System	 Green / APP / Repeat		
 Left	 Left		
 OK	 OK		
 Right	 Right		
 Auto	 Smart / List		
 Down	 Down		
 Menu	 Menu / Home		
 ← Tracking	 I<< / Preset-		
 Tracking →	 >>I / Preset+		
 Slow-	 Shift + Down		
 Slow+	 Shift + Up		

