





































Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Guide / EPG / -/--	 Guide / EPG / -/--
 AV	 AV / Input / RDS
 Menu	 Menu / Home
 Swap	 Back / Return
 OK	 OK

Original	Replacement
 Up	 Up
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 Down	 Down
 Right	 Right
 Vol+	 Vol+
 Left	 Left
 Vol-	 Vol-
 TV/TX	 Text / Goto
 PP	 Fav / Marker / PC
 16:9	 Setup / OPT /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Violet	 Display / Media
 [] Smart Controls	 Picture / Format





Original	Replacement	Original	Replacement
Smart Controls	Sound / Title		
MIX/))·((Audio / Lang I/II		
P100/PAT	Sleep / Timer		
SUB	Subtitle / EQ		
Update	Zoom / Size		
Hold	Stop / Hold		
Doub/Freeze	Eject / Surround		
REV/Scan	TV/Radio /		

