 



 


 
 
 
 

 
 



 



 
 


 
 
 
 

 
 
 
 
 
 
 

 



 
 
 

 
 




 
 
 

 

 

 

 





 

 


 
 

 



 
 
 
 
 


 





 






Original	Replacement	Original	Replacement
 Power	 Power	 Xacti Menu	 Blue
 Eco	 Shift + 3D	 1	 1
 Audio	 Dual	 2	 2
 On Timer	 Text	 3	 3
 Caption	 Subt	 4	 4
 Reset	 3D	 5	 5
 Sleep	 Sleep	 6	 6
 Picture	 Format	 7	 7
 Sound	 Shift + Dual	 8	 8
 Play	 Play	 9	 9
 Pause	 Pause	 0	 0
 Stop	 Stop	 --/Sub CH	 Guide
 <<	 <<	 Input	 AV
 >>	 >>	 Vol+	 Vol +
 W	 Red	 Vol-	 Vol -
 T	 Green	 Mute	 Mute
 Camera	 Yellow	 CH+	 Ch +





	Original	Replacement	Original	Replacement
	CH-	 Ch -		
	Recall	 Pre Ch		
	DYN Vol	 Smart		
	USB	 Media		
	Pix Shape	 Options		
	Menu	 Menu		
	Help	 D. Menu		
	Info	 Info		
	Exit	 Exit		
	Up	 Up		
	Down	 Down		
	Right	 Right		
	Left	 Left		
	Enter	 Ok		

