



Original	Replacement
Standby/On	Power
Program/Rando	Shift + Sleep
Return	Back
Open/Close	Eject
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Angle	Smart
A.Replay	D. Menu
Zoom	Shift + Eject

Original	Replacement
Audio	Dual
Sleep	Sleep
Test	Guide
Clear	Exit
Picture Mode	Format
Trim	AV
RDS	Subt
Surround	Shift + List
Tune/Band	Green
Mute	Mute
Bass	Yellow
Function	Red
Sound	Shift + Dual
Vol+	Vol +
Vol-	Vol -
Menu	Menu
Setup	Options





Original		Replacement		Original		Replacement	
	Top Menu	 + 	Shift + Menu		S.T.On/Off		List
	On Screen		Info		Search Mode		TV/R
	Up		Up		L.Memo		3D
	Down		Down		A-B Rep	 + 	Shift + Text
	Right		Right		Repeat		Text
	Left		Left				
	Enter		Ok				
	Pause		Pause				
	Play		Play				
	Stop		Stop				
	<</Tune/PTY-		<<				
	Tune/PTY+>>		>>				
	I<</Preset+/PTY		I<<				
	Preset+/PTY		>>I				
	<I/R.Slow		Ch -				
	F.Slow/I>		Ch +				
	S.T.CH		Media				

